



KITTITAS COUNTY FIRE MARSHAL'S OFFICE


411 N. Ruby St., Suite 2, Ellensburg, WA 98926

Office (509) 962-7657

INFORMATIONAL
BULLETIN

FM-08

Fire Marshal LPG Tank Setbacks (Above Ground Tanks)

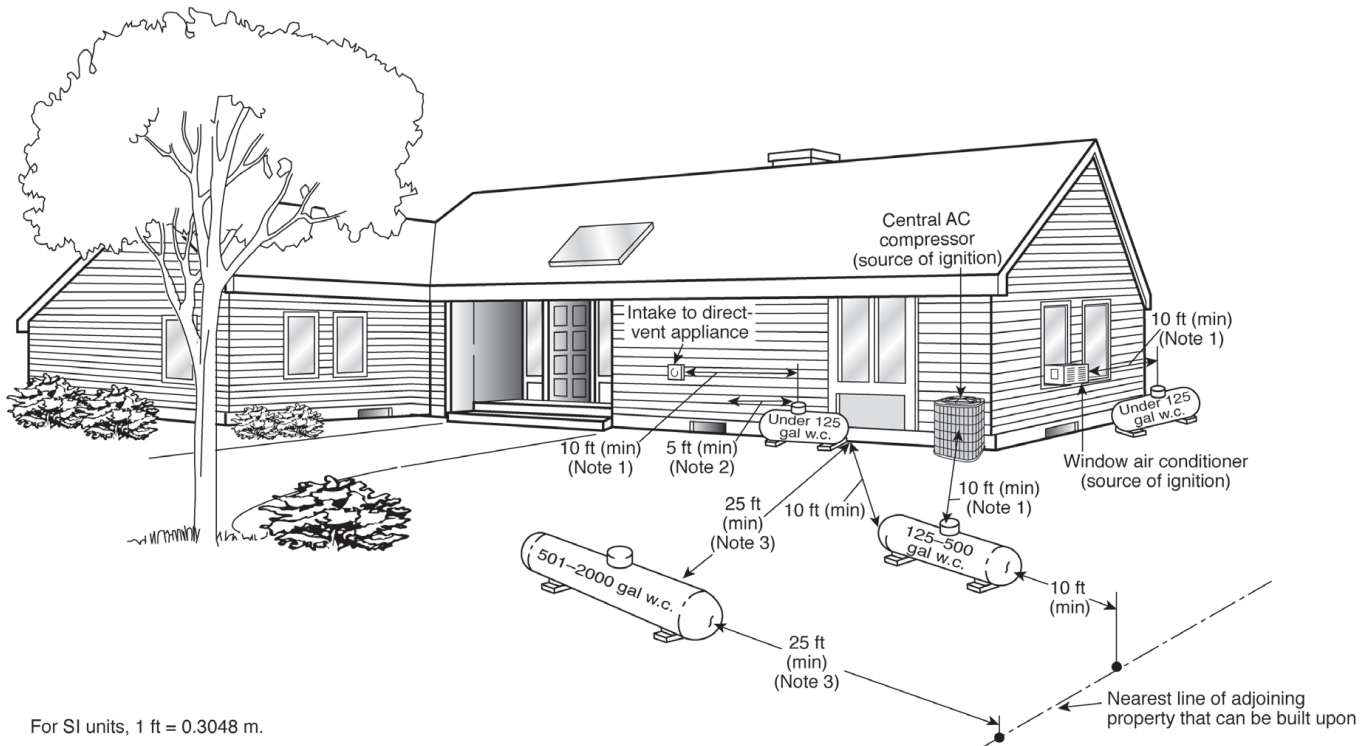

NOTES:

(1) Regardless of its size, any ASME container filled on site must be located so that the filling connection and fixed maximum liquid level gauge are at least 10 ft from any external source of ignition (e.g., open flame, window AC, compressor), intake to direct-vented gas appliance, or intake to a mechanical ventilation system. Refer to 6.3.9

(2) Refer to 6.3.1.3

(3) This distance can be reduced to no less than 10 ft for a single container of 1200 gal (4.5 m³) water capacity or less, provided such container is at least 25 ft from any other LP-Gas container of more than 125 gal (0.5 m³) water capacity. Refer to 6.3.1.3

How do I schedule an inspection from the Fire Marshal's Office?

You may schedule an inspection 1 of 2 ways.

NOTES:

1. Call the Community Development Services Inspection Request Line at 509-962-7694 and request a Fire Marshal LPG Inspection, or
2. Visit the County's Website at: <http://www.co.kittitas.wa.us/cds/request.asp>

The Kittitas County Fire Marshal's Office only inspects exterior gas piping and tank assemblies. All piping and appliance inspections on the interior of the structure must be requested through Kittitas County Community Development Services.

(SEE REVERSE SIDE FOR UNDERGROUND TANK SETBACKS)



KITTITAS COUNTY FIRE MARSHAL'S OFFICE


411 N. Ruby St., Suite 2, Ellensburg, WA 98926

Office (509) 962-7657

INFORMATIONAL
BULLETIN

FM-08

Fire Marshal LPG Tank Setbacks (Underground Tanks)

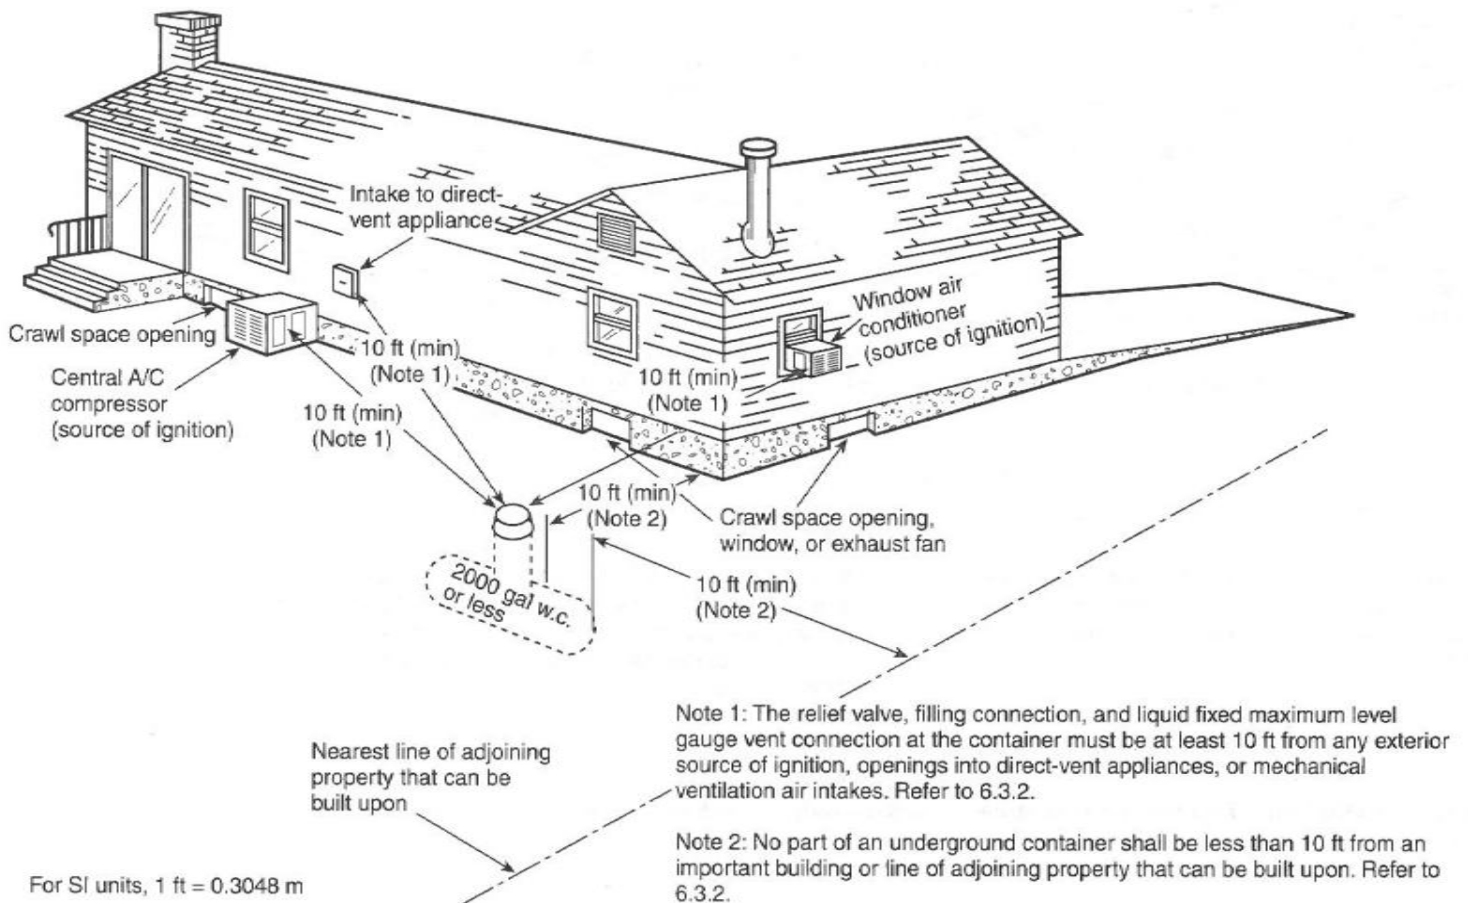

How do I schedule an inspection from the Fire Marshal's Office?

You may schedule an inspection 1 of 2 ways.

1. Call the Community Development Services Inspection Request Line at 509-962-7694 and request a Fire Marshal LPG Inspection, or
2. Visit the County's Website at: <http://www.co.kittitas.wa.us/cds/request.asp>

The Kittitas County Fire Marshal's Office only inspects exterior gas piping and tank assemblies. All piping and appliance inspections on the interior of the structure must be requested through Kittitas County Community Development Services.

(SEE REVERSE SIDE FOR ABOVE GROUND TANK SETBACKS)